



# **M 20** SERIES

## Firmware Update Guide


## FIRMWARE UPDATE PROCEDURE

1. Download the latest firmware package available on the web page <https://www.rcf.it/products/mixing-consoles/m-series/m-20-firmware-update>
2. Unzip the .zip file and copy the **RCF-M20X-xxxx.mpk** file on the root directory of a FAT32 formatted USB stick. Be sure to have one .mpk file only in the USB stick, to avoid file mismatch.
3. Turn on the M 20X digital mixer.
4. Once the boot is completed, pressing SYSTEM button on the left side of the 5" touchscreen display, go to the page SYSTEM > UTILITIES > FIRMWARE UPDATE.



5. Insert your USB stick into the USB A port. The upper side shows the firmware version that is currently installed on the mixer. The bottom side shows the firmware version on the USB stick ready to be installed.
6. If the new package is not automatically detected, please press CHECK NOW
7. Once the new package is detected, press UPDATE and then confirm the system reboot required to apply the new firmware.



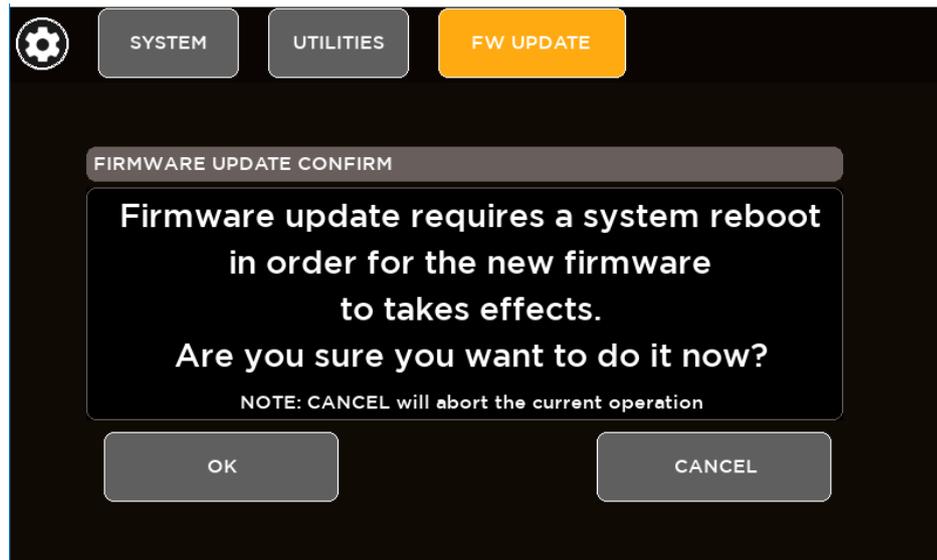

8. After a few seconds you will see a confirmation notice before mixer restart.



9. After rebooting the new features will be ready to be enjoyed.