


All RCF active speakers feature FiRPHASE processing for a 0° linear-phase response. This means that a perfect phase alignment with other RCF speakers and subwoofers only requires a simple time delay. Time delay is already available onboard RCF HDL and TT+ speakers. Systems without internal delay require an external capable device.

Insert the following pre-alignment values into your RCF speaker's back panel, RDNet manager or external delay device to provide perfect time alignment when paired with RCF subwoofers. For suspended speakers, add (or subtract) delay-values measuring the PHYSICAL OFFSET between the SPEAKER and the SUBWOOFER as in the following scheme:

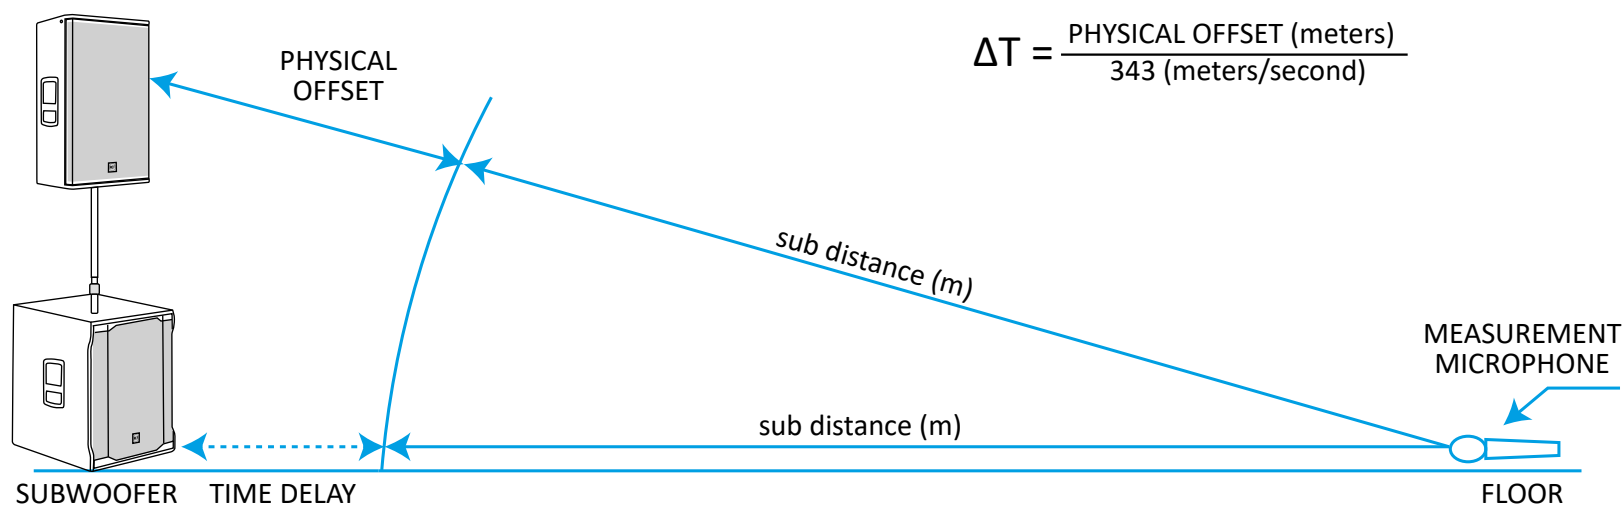

## NX L44-A II

### Subwoofer

Loudspeaker type	NXL 44-A II		SUB 705-AS II		SUB 708-AS II		SUB 905-A II		SUB 8003-AS II		SUB 705-AS Mk3		SUB 708-AS Mk3		SUB 905-A Mk3		SUB 8003-AS Mk3	
Preset	HIGH - PASS		80Hz		110Hz		30 - 60Hz (L1)		30 - 80Hz (L2)		80Hz		80Hz		30 - 80Hz (L2)		30 - 100Hz (L3)	
Polarity	[+] / 0°		[-] / 180°		[+] / 0°		[+] / 0°		[+] / 0°		[-] / 180°		[-] / 180°		[+] / 0°		[+] / 0°	
Link or X-Over Output			X-Over Output		X-Over Output		Link Output		X-Over Output		X-Over Output		X-Over Output		X-Over Output		X-Over Output	
Pre-alignment delay	0.0 ms	0.0 m	0.0 ms	0.0 m	0.0 ms	0.0 m	5.8 ms	2.0 m	3.0 ms	1.0 m	0.0 ms	0.0 m	0.0 ms	0.0 m	5.2 ms	1.8 m	4.7 ms	1.6 m
	0.0 ms	0.0 m																
	0.0 ms	0.0 m																
	0.0 ms	0.0 m																
	0.0 ms	0.0 m																
	0.0 ms	0.0 m																
	0.0 ms	0.0 m																
	0.0 ms	0.0 m																

Loudspeaker type	NXL 44-A II		SUB 8004-AS		SUB 8006-AS		SUB 8008-AS		SUB 9004-AS		SUB 9006-AS		SUB 9007-AS		TTS 15-A		TTS 18-A II		TTS 36-A		TTS 56-A	
Preset	HIGH - PASS		120Hz		90Hz		30 - 80Hz (L2)		30 - 60 (L2)		30 - 60Hz (L2)		20 - 60 (S2)		30 - 90 (L5)		30 - 70 (L3)		30 - 90Hz		30 - 90Hz	
Polarity	[+] / 0°		[-] / 180°		[+] / 0°		[-] / 180°		[-] / 180°		[-] / 180°		[+] / 0°		[-] / 180°		[-] / 180°		[+] / 0°		[+] / 0°	
Link or X-Over Output			X-Over Output		Link Output		X-Over Output		Link Output		Link Output		Link Output		Link Output		Link Output		X-Over Output		X-Over Output	
Pre-alignment delay	0.0 ms	0.0 m	5.5 ms	1.9 m	3.0 ms	1.0 m	8.5 ms	2.9 m	1.0 ms	0.3 m	1.0 ms	0.3 m	4.5 ms	1.5 m	0.0 ms	0.0 m	1.0 ms	0.3 m	5.4 ms	1.9 m	4.7 ms	1.6 m
	0.0 ms	0.0 m																				
	0.0 ms	0.0 m																				
	0.0 ms	0.0 m																				
	0.0 ms	0.0 m																				
	0.0 ms	0.0 m																				
	0.0 ms	0.0 m																				
	0.0 ms	0.0 m																				

$\Delta T$  (ms) = Physical Offset (m) / 0.343 (m/ms)

∅ - polarity reverse [+] = 0° Phase [-] = 180° Phase

To convert milliseconds (ms) values in meters, multiply them by 0.343